
 


DS1SPL MANUAL MASTER RESET

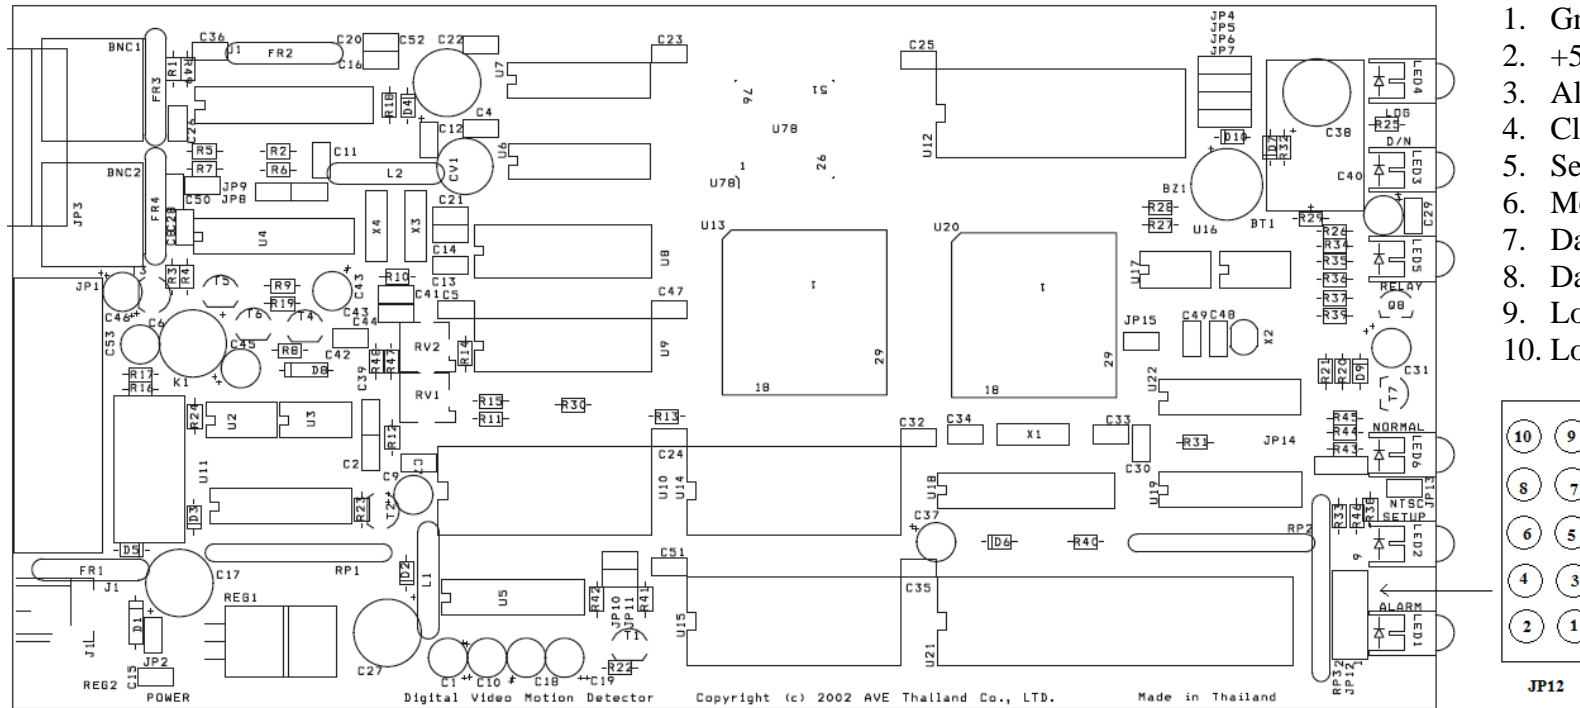

JP12 Pin's Assignment

1. Ground
2. +5VCC
3. Alarm LED
4. Clear Switch
5. Set LED
6. Menu Switch
7. Day/Night LED
8. Day/Night Switch
9. Log LED
10. Log Switch



This Procedures is no require any Power down of DS-16 Rack

1. Remove DS1SPL Card out of DS-16 Rack
2. Connect PIN 1 to PIN 4
3. Insert DS1SPL into DS-16 Rack While DS1SPL is Powering Up, it will read PIN4 (Clear Switch) if short to ground it will go to factory default.
4. after DS1SPL is powered up and master reset completed, then remove connection PIN1 to PIN 4